

## In the Event of a *Fire Alarm*









ALARM indicator: blinking.

Fire Brig. Signalled indicator: steady light.

The internal buzzer is activated.






The text display indicates the detection zones in alarm state and their location.

Step	Actions to be taken
1	Follow all precautions described in the local fire instructions, step by step.
2	To silence the internal buzzer, press the Mute Panel button 
3	Press 
4	Observe the zone(s) in Alarm State (display).  If necessary, press  or digit 1 for more detailed information, then press  to return to previous level.
5	Investigate the scene(s) and carry out the necessary actions.
6	To silence all alarms, press the Silence Alarms button. 
7	Press the Reset button. 

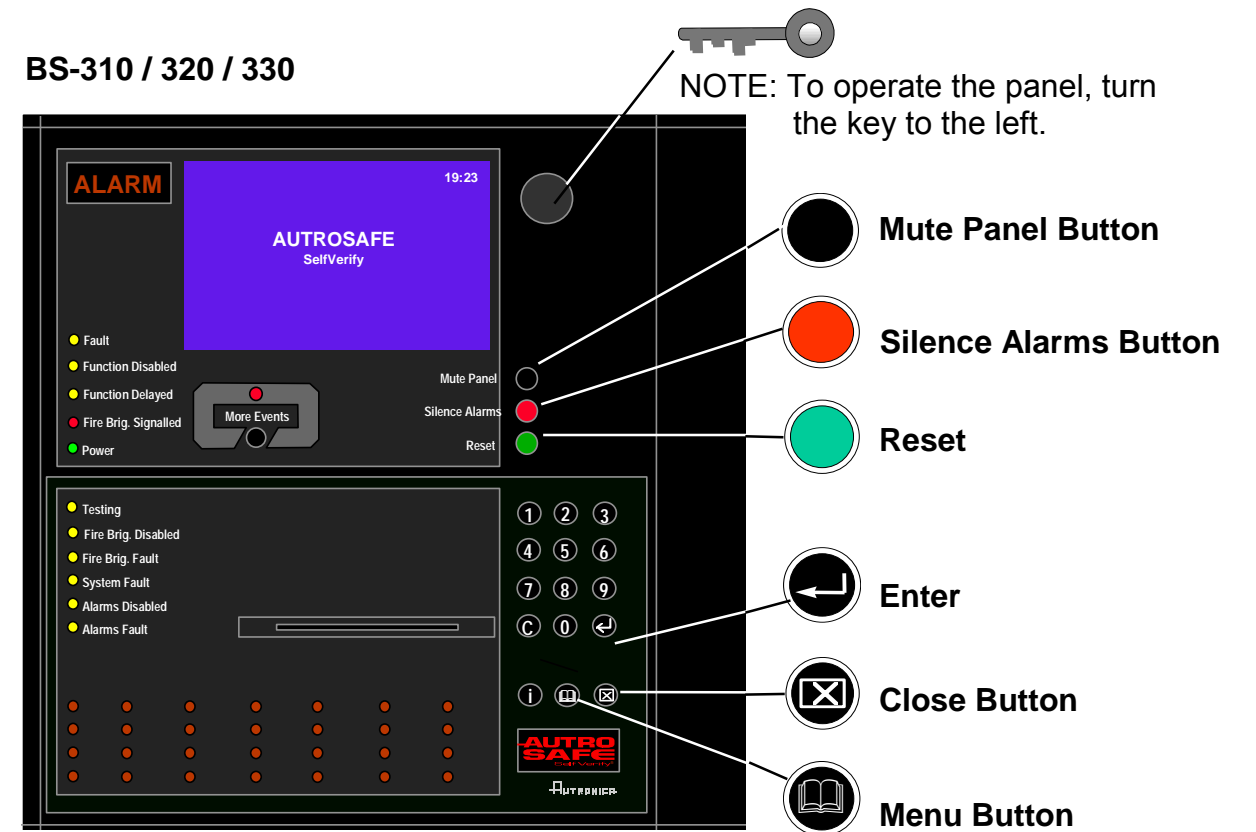
## In the Event of a *Fire Warning*

The internal buzzer is activated.

The text display indicates the detection zones in this state and their location.




Step	Actions to be taken
1	Follow all precautions described in the local fire instructions, step by step.
2	To silence the internal buzzer, press the Mute Panel button 
3	Press 
4	Observe the zone(s) in Fire Warning state (display).  If necessary, press  or digit 1 for more detailed information, then press  to return to previous level.
5	Investigate the scene(s) and carry out the necessary actions.
6	To accept the selected Fire Warning, press digit 4 (ACCEPT FIRE WARNING).
7	Press the Reset button. 

BS-310 / 320 / 330



## In the Event of Faults

Fault indicator: Blinking light when unaccepted fault warnings exist. The text display indicates the nature of the fault. The internal buzzer is activated.

Step	Actions to be taken
1	Notify service personnel.
2	To silence the internal buzzer, press the Mute Panel button 
3	Press 
4	Observe the Fault Warnings.
5	Investigate the scene(s) and carry out the necessary actions, i.e. repair the faults.
6	If there are several fault warnings, select by scrolling with the arrow buttons, then press 
7	To accept the selected fault warning, press digit 3 (ACCEPT FAULT WARNING).

Contact your local *Autronica Service Team* when service is required. Autronica Fire and Security AS, 7483 Trondheim, Norway. Phone: + 47 73 58 25 00, fax: + 47 73 58 25 01.